

HYDRAULIC DISC BRAKES

Install the caliper to the front fork so the disc is positioned between the pads, being careful not to damage the pads.


Make sure that the guide plate and brake hose are installed in the position shown.

Tighten the caliper mounting bolts.

TORQUE: 24–30 N·m
(2.4–3.0 kg·m, 17–22 ft·lb)

Tighten the pad pin bolts.


TORQUE: 15–20 N·m
(1.5–2.0 kg·m, 10–14 ft·lb)

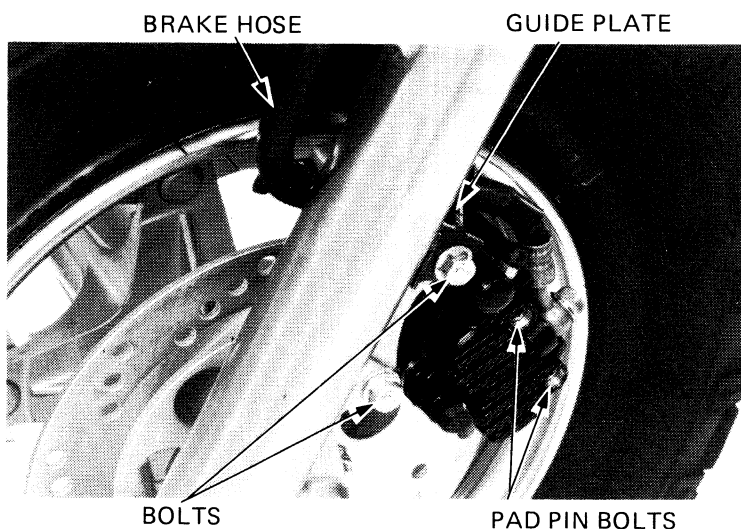

Install the pad pin bolt plugs and tighten them.

TORQUE: 10–20 N·m
(1.0–2.0 kg·m, 7–14 ft·lb)

Install the front brake hose clamp to the front fork.

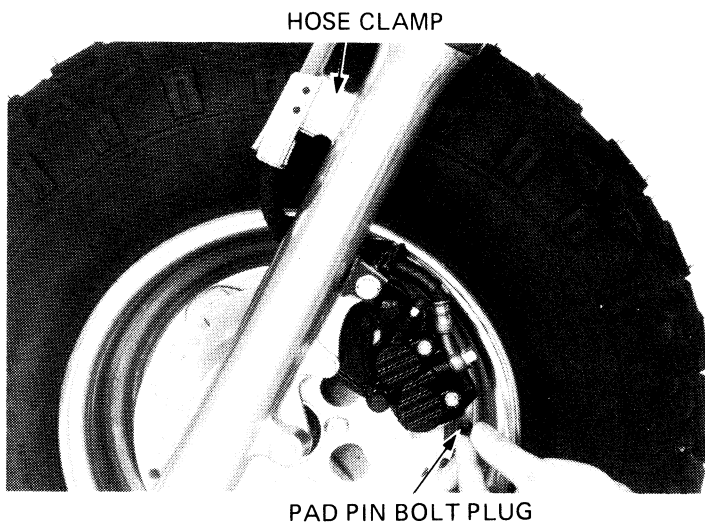

Install the front wheel nuts.

TORQUE: 60–70 N·m
(6.0–7.0 kg·m, 43–51 ft·lb)

