


FRONT WHEEL/BRAKE/SUSPENSION/STEERING

Install the fork bridge and forks (Page 11-25).
Install a new lock washer and tighten the steering stem nut.


TORQUE:

70–100 N·m (7.0–10.0 kg-m, 51–72 ft-lb)

EXTENTION 07716-0020500
LOCK NUT WRENCH, 30 x 32 mm 07716-0020400
OR COMMERCIALY AVAILABLE IN U.S.A.

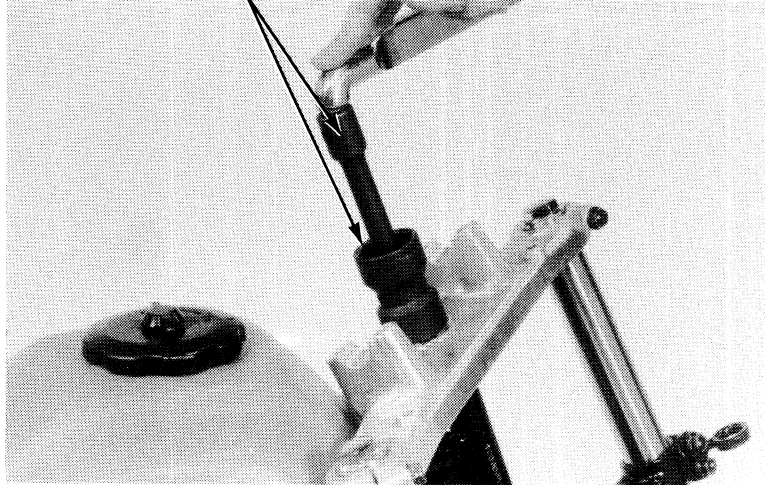

Bend up the lock washer tab.
Install the remaining removed parts in the reverse order of removal.

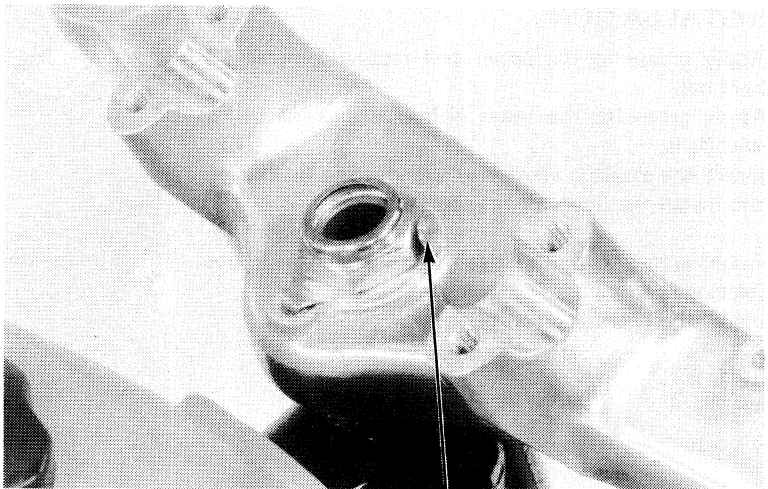

LOCK WASHER TAB