

FRONT WHEEL/SUSPENSION/STEERING

Apply Honda Bond A or Honda Hand Grip Cement (U.S.A. only) to the inside surface of the grips and to the clean surfaces of the right and left handlebar end. Wait 3-5 minutes and install the grips. Rotate the grips for even application of the adhesive.

NOTE



- Allow the adhesive to dry for an hour before using.

Place the clutch/parking brake lever bracket on the handlebar and install the holder with the "UP" mark facing up.


Align the bracket holder end with the punch mark on the handlebar and tighten the upper screw first, then tighten the lower screw.

Install the switch housing, aligning its mating surface with the punch mark on the handlebar.

Tighten the upper screw first, then tighten the lower screw.

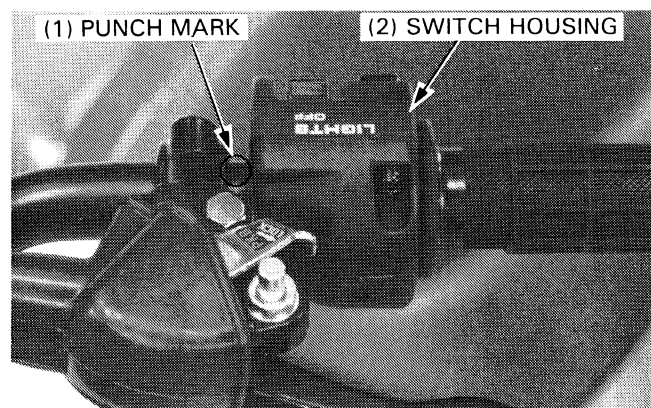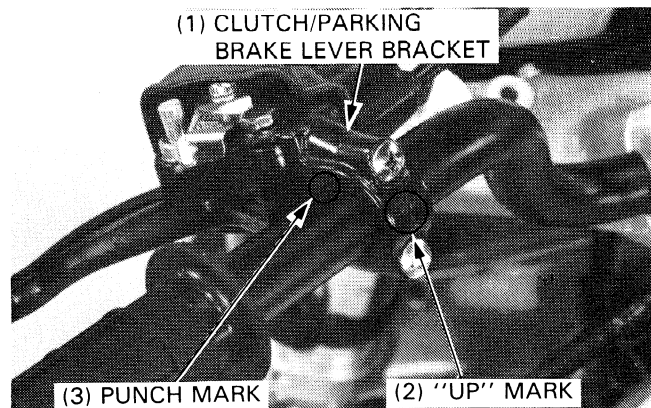

Install the handlebar switch wire bands.

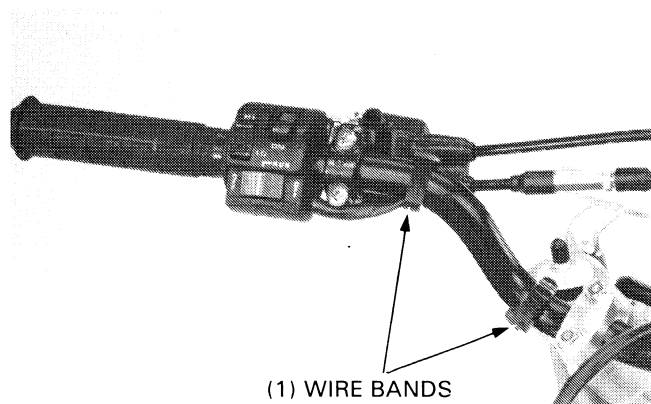

Place the front brake master cylinder on the handlebar and install the holder with the "UP" mark facing up.

Align the master cylinder holder end with the punch mark on the handlebar and tighten the upper screw first, then tighten the lower screw.

