



HYDRAULIC BRAKES

Install the parking brake arm onto the shaft, aligning the punch marks.

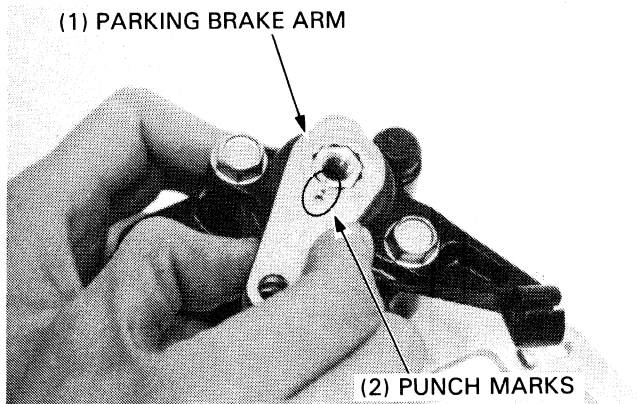

Temporarily install the parking brake adjusting bolt and lock nut.

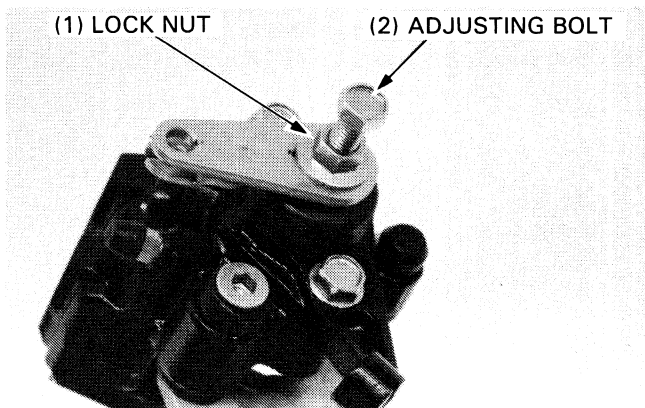

INSTALLATION

Place the caliper over the brake disc being careful not to damage the pads.

Connect the caliper bracket to the brake torque link using the bolt and nut ('85 only).

TORQUE: 24–30 N·m (2.4–3.0 kg-m, 17–22 ft-lb)

Install the caliper mounting bolts and tighten them.

TORQUE: 20–30 N·m (2.0–3.0 kg-m, 15–22 ft-lb)

Connect the parking brake cable to the brake arm.

Connect the rear brake hose using the oil bolt and two sealing washers after making sure that the sealing washers are in good condition.

Tighten the oil bolt.

TORQUE: 25–35 N·m (2.5–3.5 kg-m, 18–25 ft-lb)

Fill and bleed the rear brake system (page 14-4).

Adjust the parking brake (page 3-14).

