

# Side Nets

---

The side nets can be rolled up to make cleaning and maintaining your Honda MUV a little easier.

## Roll Up


1. Release the side net buckle and side net ring.
2. Unhook the three side net snap hooks and slide the D-rings out of the stays.
3. Roll up the side net tightly, folding in the buckle and snap hooks on the way.
4. Hook the two upper side net hooks to the upper stays.

## Roll Down

1. Unhook the upper side net hooks from the stays.
2. Fasten the side net buckle and hook the side net snap hooks. Tighten the belt of side net ring.

Always return the side nets to their normal positions, properly fastened, and tightened before driving.

### **LEFT SIDE INSIDE**

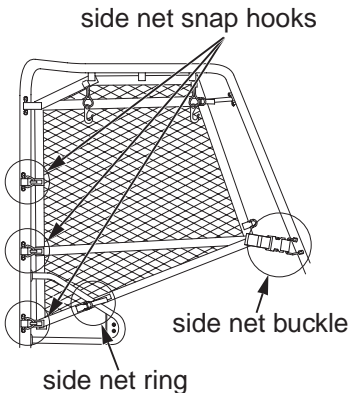

### **LEFT SIDE OUTSIDE**

