
## RIGHT FRONT

(5) axle pinch bolts (6) front axle shaft

## If You Have a Flat Tire

Installation

- 1. Install the side collars and position the wheel between the fork legs. Insert the front axle shaft from the right side, through the right fork leg and wheel hub.
- 2. Align the index line (7) of the front axle shaft with the recessed surface (8) of the fork leg.

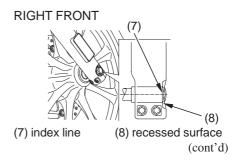

## Taking Care of the Unexpected 169