




Remove the shock absorber lower mounting bolt/nut.

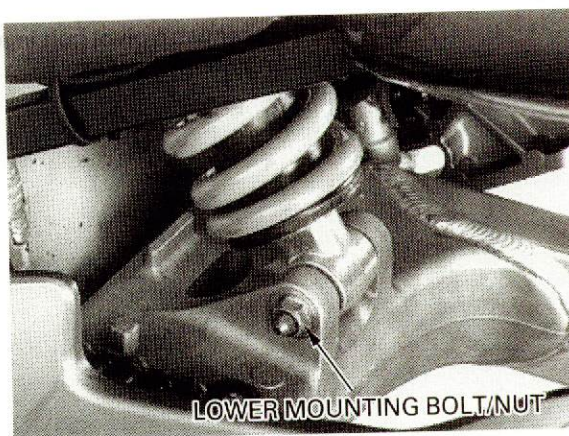

Remove the swingarm pivot caps.

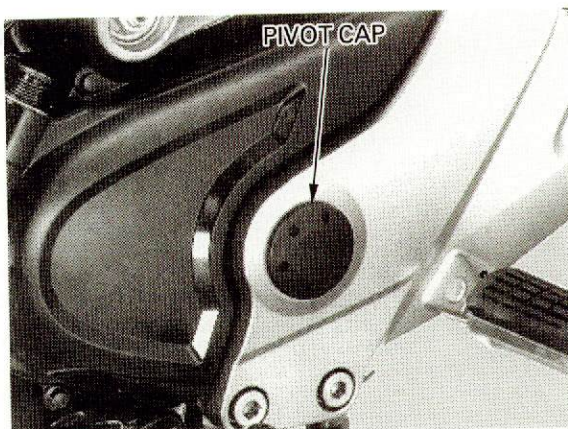

Loosen the footpeg/muffler bracket mounting bolts on both side.

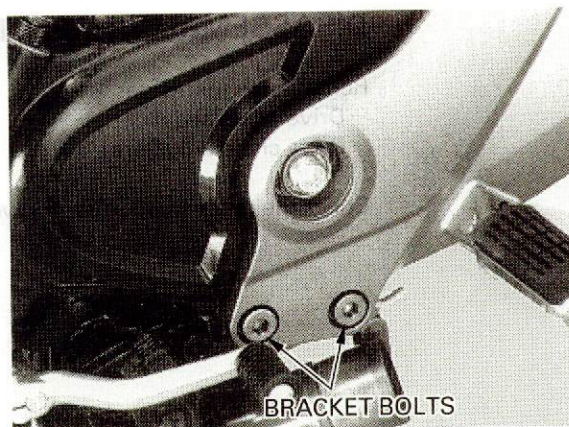

Remove the swingarm pivot nut.
Remove the footpeg/muffler bracket mounting bolts and left footpeg holder assembly.

