


REAR WHEEL/SUSPENSION


Install the left footpeg holder and temporarily install the footpeg/muffler bracket bolts. Tighten the swingarm pivot nut to the specified torque.

TORQUE: 93 N·m (9.5 kgf·m , 69 lbf·ft)

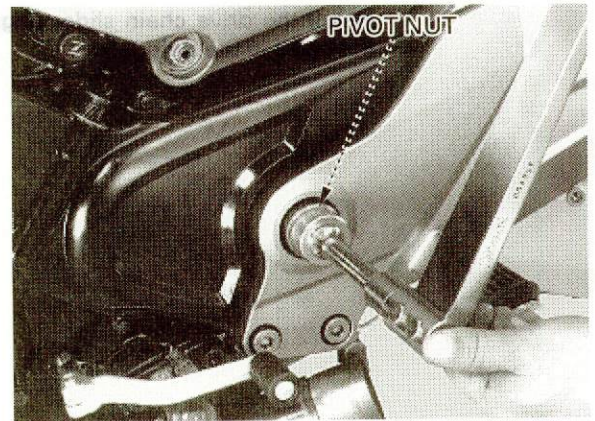


Tighten the footpeg/muffler bracket bolts to the specified torque on both side.

TORQUE: 39 N·m (4.0 kgf·m , 29 lbf·ft)

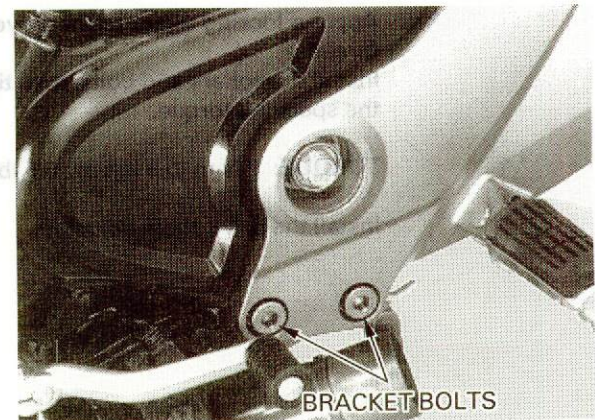

Install the swingarm pivot caps.

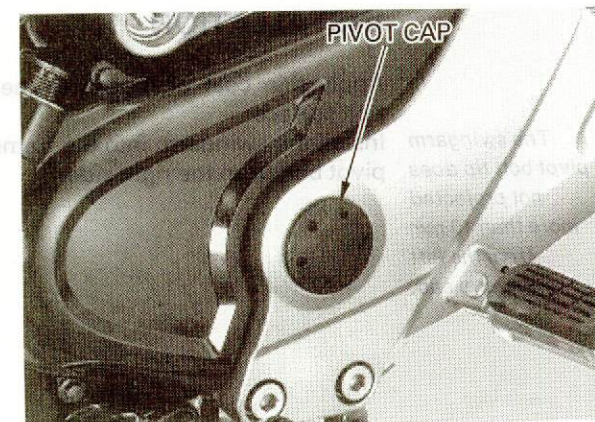

Install and tighten the rear shock absorber lower mounting bolt/nut to the specified torque.

TORQUE: 42 N·m (4.3 kgf·m , 31 lbf·ft)

