


## Front Master Cylinder Removal/Installation

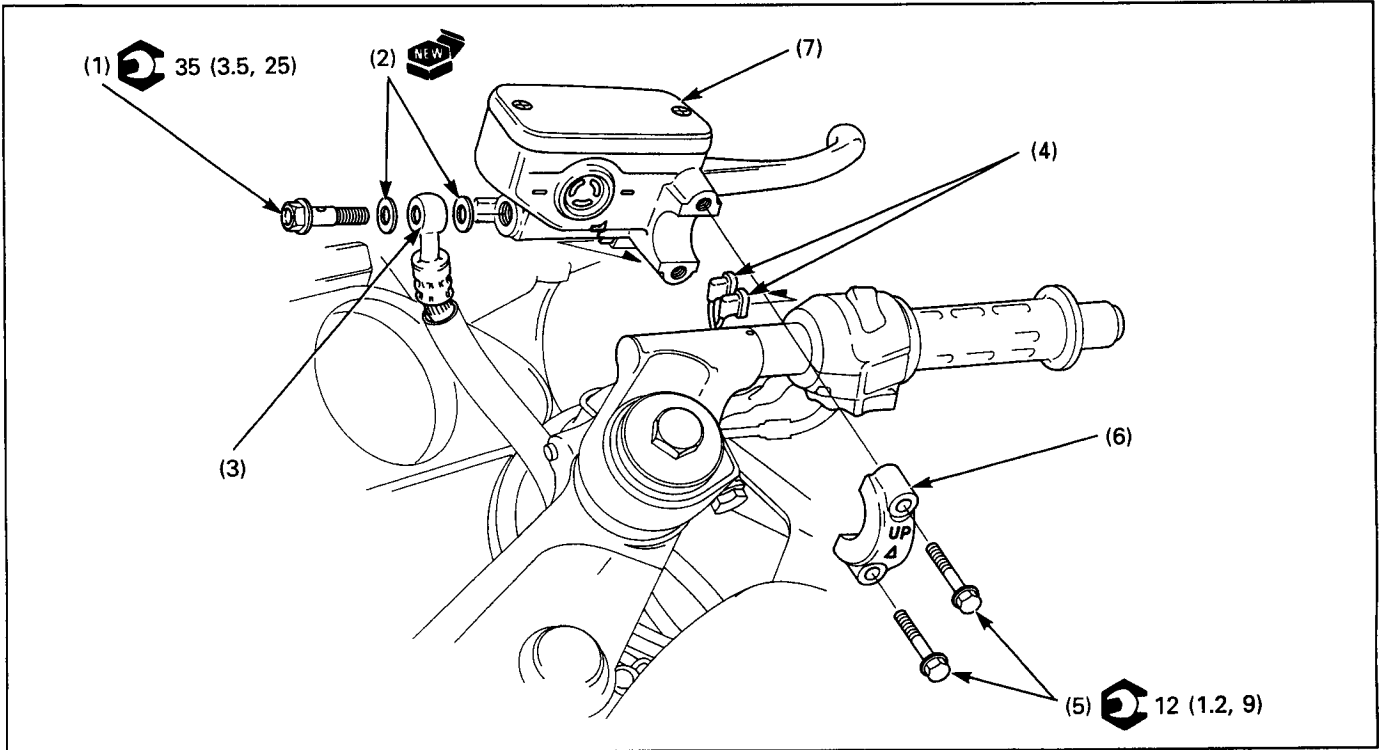

### CAUTION

- Avoid spilling brake fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.
- When removing the oil bolt, cover the end of the brake hose to prevent contamination.
- Do not allow foreign material to enter the system.

### NOTE

- Use DOT 4 brake fluid from a sealed container.

### Requisite Service

- Brake system air bleeding (page 13-25)

Procedure		Q'ty	Remarks
<b>Removal Order</b>			Installation is in the reverse order of removal.
(1)	Oil bolt	1	
(2)	Sealing washer	2	
(3)	Brake hose eyelet joint	1	At installation, press the eyelet joint against the stopper while tightening the oil bolt.
(4)	Brake light switch connector	2	
(5)	Master cylinder holder bolt	2	At installation, tighten the upper bolt first, then the lower bolt.
(6)	Master cylinder holder	1	At installation, install the holder with its "UP" mark facing up.
(7)	Master cylinder	1	At installation, align the mating surface with the punch mark on the handlebar.