




Tighten the exhaust pipe mounting bolt/nut.

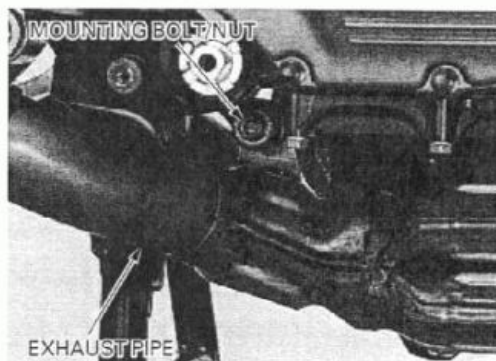

Install the radiator/oil cooler assembly aligning the radiator grommets with the upper and lower brackets.

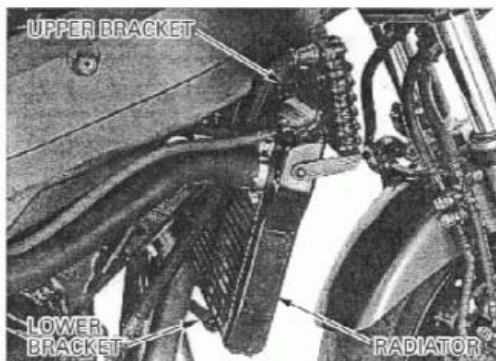

Install and tighten the radiator mounting bolt. Connect the fan motor sub-harness 2P natural connector.

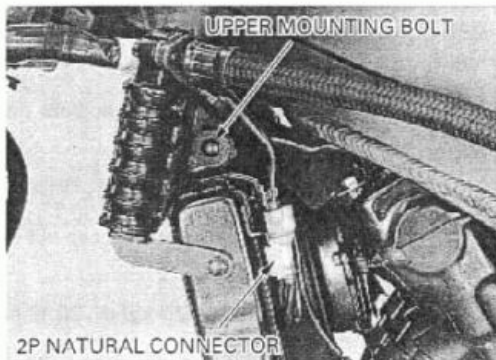

Install the main wire harness guide onto the left mounting boss as shown.

