



Install and tighten the oil cooler upper mounting bolts.

Install the following:

- Wind guard (page 2-14)
- Upper cowl cover/inner panel (page 2-7)

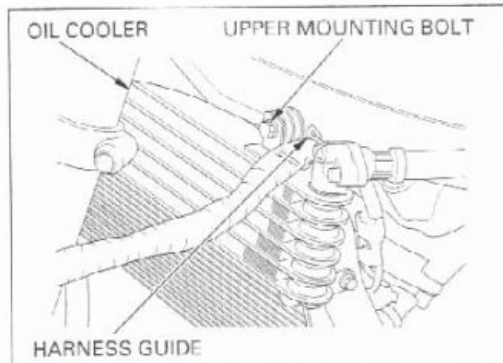

Install the new gasket into the muffler.

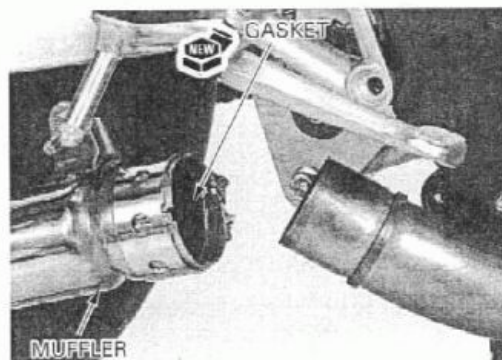

Install the mufflers.  
Temporarily install the muffler mounting bolt/nut.

Install the main footpeg holders and tighten the mounting bolts.

**TORQUE** : 26 N·m (2.7 kgf·m , 20 lbf·ft)

Tighten the muffler bracket cap nut to the specified torque.

**TORQUE** : 26 N·m (2.7 kgf·m , 20 lbf·ft)

Tighten the muffler mounting bolt/nut to the specified torque.

**TORQUE** : 26 N·m (2.7 kgf·m , 20 lbf·ft)

Tighten the muffler clamp bolts alternately, then tighten to the specified torque.

**TORQUE** : 17 N·m (1.7 kgf·m , 12 lbf·ft)

Install the lower cowl (page 2-4).

