

Fuel Strainer Screen

(Refer to the maintenance precautions on page 48).


The fuel strainer screen is incorporated in the fuel cock. An accumulation of dirt in the fuel strainer screen will restrict the flow of fuel and therefore, the fuel strainer screen should be serviced periodically.

1. Turn the fuel cock OFF.
2. Loosen the carburetor drain screw and drain the fuel from the carburetor into a suitable container.

WARNING

Petrol is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where petrol is drained or stored and where the fuel tank is refueled.

3. Remove the fuel filter bolt (1) and pull out the fuel strainer screen (2) and O-ring (3). Wash it in clean non-flammable or high flash point solvent.

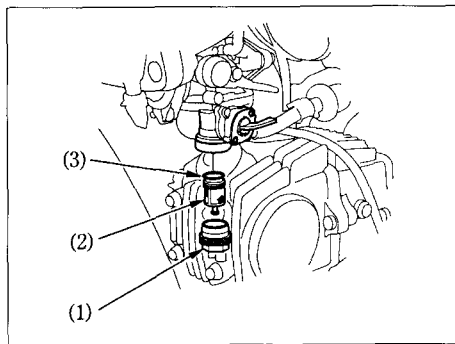

- (1) Fuel filter bolt
- (2) Fuel strainer screen
- (3) O-ring