


To adjust, perform the following steps.

- a. Clutch adjustment is made by loosening the clutch adjuster locking bolt ① and turning the adjuster ② clockwise **A** to reduce the clutch play.

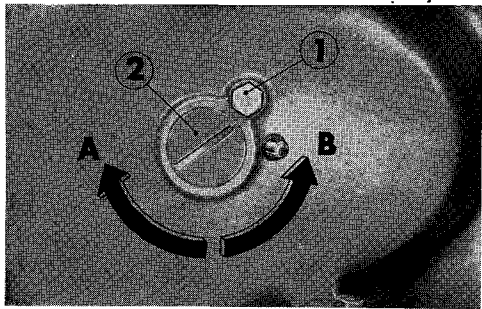


- ① Clutch adjuster locking bolt
② Clutch adjuster

- b. Minor adjustment can be made at both adjusters at the upper and lower ends of the clutch cable. Loosen the lock nut ② (④ at the lower end) at

the clutch lever and turn the cable adjuster bolt ① (③ at the lower end). Turning the cable adjuster bolt clockwise **A** will increase the play in the clutch lever, turning in the **B** direction will decrease the play. Do not forget to tighten the lock nut after completing the adjustment.

- c. After the adjustment has been made,

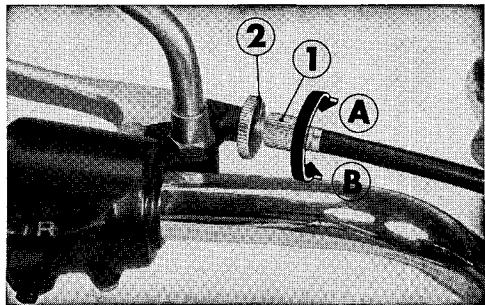

- ① Clutch cable adjuster bolt ② Lock nut