


3. Remove the bolts C (4).
4. Remove the clip B (5) and clip C (6).
5. Remove the bolts D (7).
6. Release the prong (8) of the right lower cowl (9) from the grommet and remove the right lower cowl.
7. Remove the bolts E (10).
8. Release the prong (11) of the left lower cowl (12) from the grommet and remove the left lower cowl.
9. Remove the clip D (13).
10. Release the prongs (14) of the inner half cowl (15) from the frame grommets and remove the inner half cowl (15).

Installation:

- Installation can be done in the reverse order of removal.

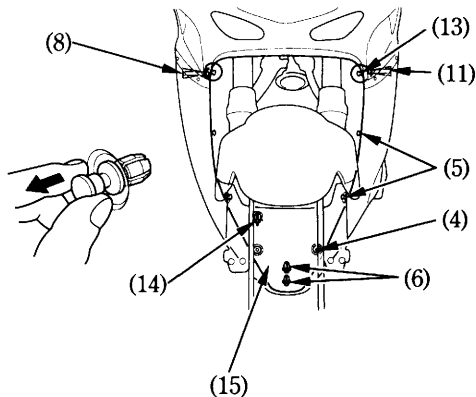

- | | | |
|------------|------------|----------------------|
| (4) Bolt C | (8) Prong | (13) Clip D |
| (5) Clip B | (11) Prong | (14) Prong |
| (6) Clip C | | (15) Inner half cowl |