


## BRAKE SYSTEM


### ASSEMBLY

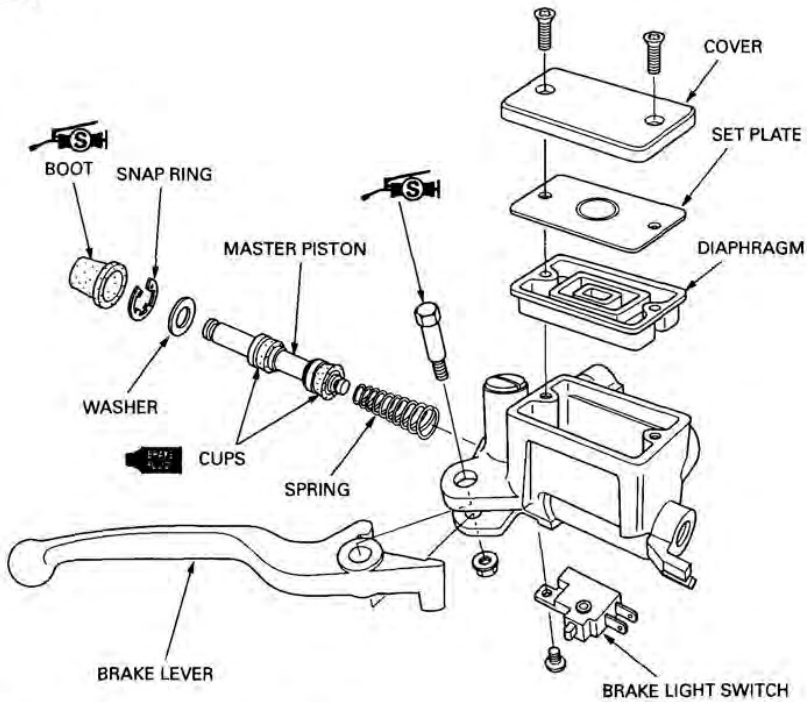

#### CAUTION:

*When installing the cups, do not allow the lips to turn inside out.*

Dip the piston cups in clean brake fluid before assembly. Install the spring onto the master piston and washer into the master cylinder.

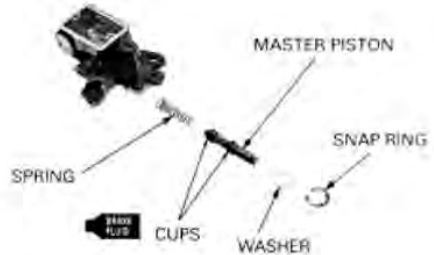

Install the snap ring using the special tool.

#### TOOL:

Snap ring pliers

07914 - SA50001

#### CAUTION:

*Be certain the snap ring is firmly seated in the groove.*

Apply silicone grease to the inside of the boot. Install the boot to the master piston.

