

Free Play Adjustment:

Measure the throttle grip free play at the throttle grip flange.

The standard free play should be approximately:



2 – 6 mm (0.1 – 0.2 in)

Major free play adjustments, such as after replacing the throttle cables or removing the carburetor, are made with the lower adjuster (3). Minor free play adjustments are made with the upper adjuster (5). To adjust free play, loosen the lock nut (2) or (4), and turn the adjuster (3) or (5).

Tighten the lock nut after adjustment.

After adjustment, check again for smooth rotation of the throttle grip from the fully closed to the fully open position with the steering to the full right and left as well as straight ahead.

If proper throttle free play cannot be achieved, contact your Honda dealer.

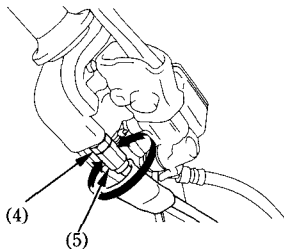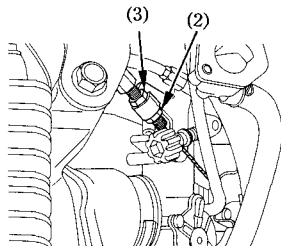

(2) Lower lock nut

(3) Lower adjuster

(4) Upper lock nut

(5) Upper adjuster