


## JASO T 903 standard

The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines.

There are two classes: MA and MB.


Oil conforming to the standard is labeled on the oil container. For example, the following label shows the MA classification.

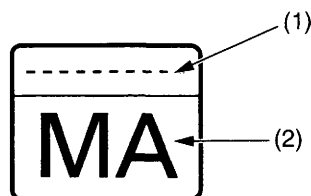

PRODUCT MEETING JASO T 903  
COMPANY GUARANTEEING THIS MA PERFORMANCE:

- (1) code number of the sales company of the oil  
(2) oil classification

## Checking & Adding Oil

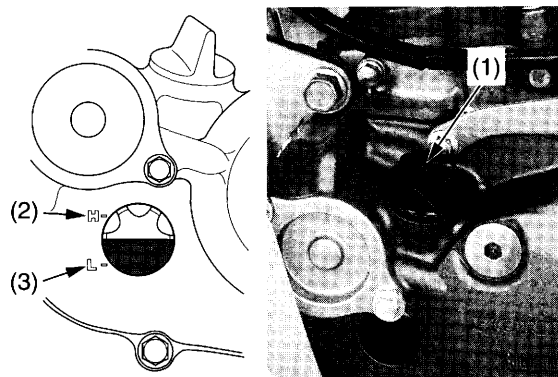

- (1) engine oil filler cap  
(2) upper level (H) mark  
(3) lower level (L) mark

1. Run the engine at idle for 3 minutes, then shut it off.
2. Wait 3 minutes after shutting off the engine to allow the oil to properly distribute itself in the engine.
3. Support the CRF in an upright position on a level surface.
4. Remove the engine oil filler cap (1).
5. Check that the oil level is between the upper (2) and lower (3) level marks in the inspection window.
  - If the oil is at or near the upper level mark, you do not have to add oil.
  - If the oil is below or near the lower level mark, add the recommended oil until it reaches the upper level mark. (Do not overfill)
 Reinstall the engine oil filler cap.  
Repeat steps 1–5.
6. Reinsert the engine oil filler cap.
7. Check for oil leaks.


## Changing Engine Oil & Filter

1. Run the engine at idle for 3 minutes, then shut it off.
2. Support the CRF in an upright position on a level surface.
3. Remove the engine oil filler cap (1) from the left crankcase cover.
4. Place an oil drain pan under the engine to catch the oil. Then remove the engine oil drain bolt (2) and sealing washer (3).
5. With the engine stop button pushed, repeat kickstarter operation approximately five times to drain the engine oil completely.
6. After the oil has drained, apply engine oil to the drain bolt threads and tighten it with a new sealing washer to the specified torque: 16 N·m (1.6 kgf·m, 12 lbf·ft)

Pour the drained oil into a suitable container and dispose of it in an approved manner (page 142).

### NOTICE

*Improperly disposal of drained fluids is harmful to the environment.*

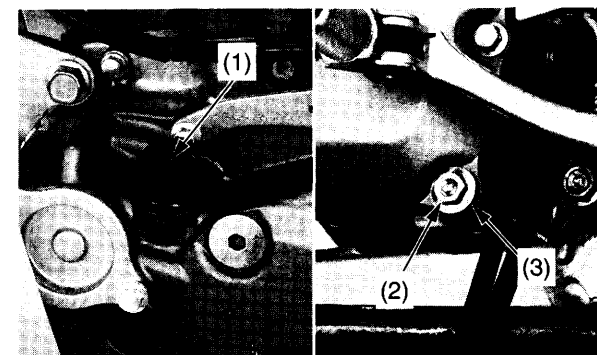

- (1) engine oil filler cap  
(2) engine oil drain bolt  
(3) sealing washer

(cont'd)