



2. If the adjuster is threaded out near its limit or the correct freeplay cannot be obtained using the cable adjuster (4), loosen the lock nut (3) and turn in the cable adjuster (4) completely. Tighten the lock nut (3) and install the rubber dust cover.
3. Loosen the front brake cable guide bolt (5).

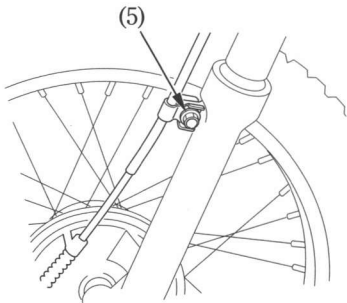

(5) Cable guide bolt

4. Loosen the lock nut (6) at the lower end of the cable. Turn the adjusting nut (7) to obtain the specified freeplay. Tighten the lock nut and check the adjustment.

If proper adjustment cannot be obtained by this method, see your Honda dealer.

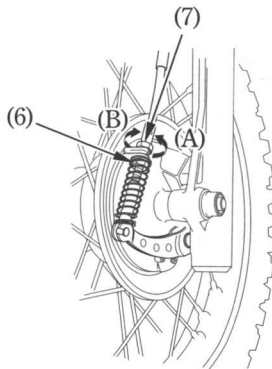

(6) Lock nut

(7) Adjusting nut

(A) Decrease freeplay

(B) Increase freeplay