



3. Next, check the free play of the front brake lever ①. The standard free play is **0.4-0.8 in. (10-20 mm)** at the front brake lever tip.
4. This adjustment is made with the rear brake cable adjuster ③ after the lock nut ④ is loosened. The free play becomes large by turning the adjuster toward the direction A (clockwise), while it becomes small by turning the adjuster toward the direction B (counterclockwise).

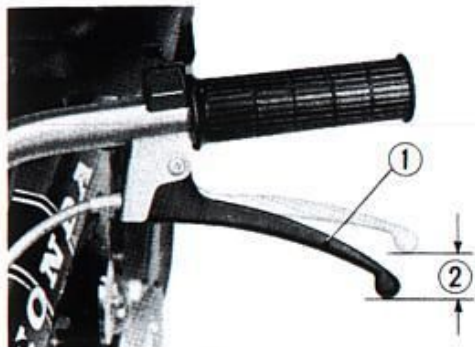

- 1 Rear brake lever
- 2 Free play

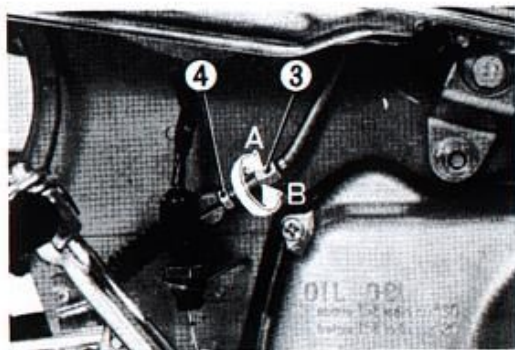

- ③ Rear brake cable adjuster
- ④ Lock nut