
Starting Procedure


To restart a warm engine, follow the procedure for “ High Air Temperature.”

Normal Air Temperature 10° – 35°C (50° – 95°F):

1. Push the choke lever down all the way to Fully Open (B).
2. Start the engine, leaving the throttle closed.

NOTE:

- Do not open the throttle when starting the engine with the choke open. This will lean the mixture, resulting in hard starting.

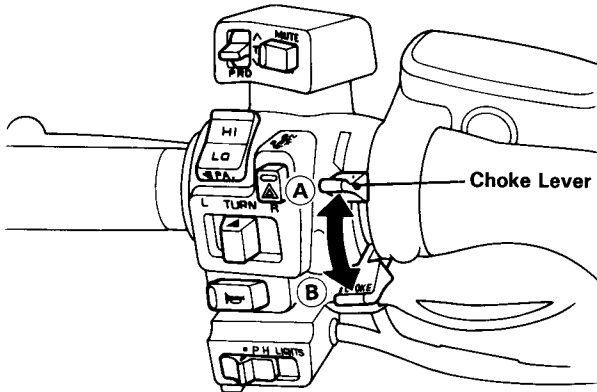

3. Immediately after the engine starts, operate the choke lever to keep fast idle at 1,500–2,500 rpm.
4. About a half minute after the engine starts, push the choke lever up all the way to fully off.
5. If idling is unstable, open the throttle slightly.

High Air Temperature 35°C (95°F) or above:

1. Do not use the choke.
2. Open the throttle slightly.
3. Start the engine.