


### Battery electrolyte :


The battery (1) is behind the right side cover. Check the electrolyte level with the motorcycle in an upright position on level ground. The electrolyte must be maintained between the UPPER (2) and LOWER (3) level marks on the side of the battery. If the electrolyte level is low, remove the battery and remove the battery filler caps. Carefully add distilled water to the UPPER level mark, using a small syringe or plastic funnel.

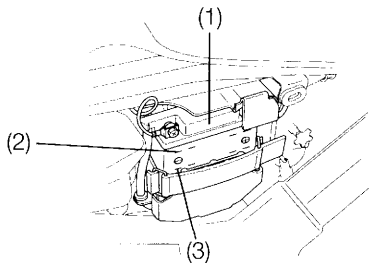

- (1) Battery  
(2) UPPER level mark  
(3) LOWER level mark

### Battery removal :

1. Remove the right side cover (page 39)
2. Disconnect the negative (-) terminal lead (4) from the battery.
3. Open the terminal cover (5), then disconnect the positive (+) terminal lead (6).
4. Remove the battery band (7) and open the battery cover (8).
5. Remove the battery (1).

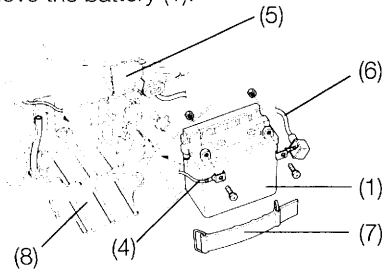

- (4) Negative (-) terminal lead  
(5) Terminal cover  
(6) Positive (+) terminal lead  
(7) Battery band  
(8) Battery cover