


Starting Procedure

To restart a warm engine, follow the procedure for “High Air Temperature.”

Normal Air Temperature

10° – 35° C (50° – 95° F)

1. Pull the choke lever (1) back all the way to Fully ON (A), if the engine is cold.

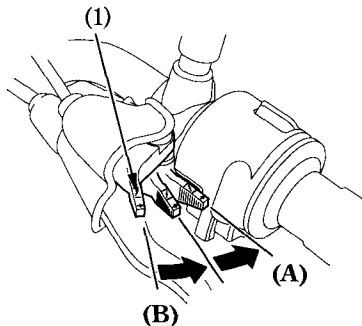

(1) Choke lever

(A) Fully ON

(B) Fully OFF

2. Start the engine, leaving the throttle closed.

NOTE:

* Do not open the throttle when starting the engine with the choke ON. This will lean the mixture, resulting in hard starting.

3. Immediately after the engine starts, operate the choke lever (1) to keep fast idle.
4. About a half minute after the engine starts, push the choke lever (1) forward all the way to Fully OFF (B).
5. If idling is unstable, open the throttle slightly.