


4. Recheck the brake lever free play. If free play is still excessive after adjusting the brake lining clearance, there is probably air in the brake system and it must be bled out. See your authorized Honda dealer for this service.

Adjustment:

1. Pump the brake lever 2-3 times firmly and release it.
2. Remove the adjusting hole cap (1).
3. Turn the both brake shoe adjusters (2) up with a screwdriver until the front brake locks.

**NOTE:**

- \* Do not work on both adjusters at the same time.

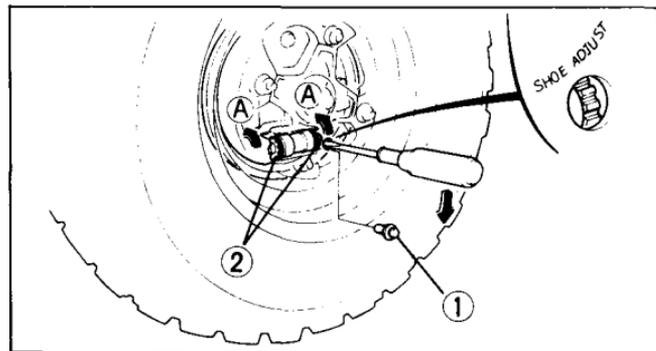

- (1) Adjustment hole cap    (2) Adjusters  
(A) Brake locks

4. Back the adjusters off three clicks and pump the brake lever several times.
5. Turn the wheel manually and make sure it does not drag.
6. Adjust the other front brake.
7. Install the rubber cap.