

BRAKES

FRONT BRAKES

This Sportrax has drum brakes on both front wheels. Each day before riding you should check the brake lever free play. You should also periodically check the brake shoes for wear.

To check and adjust brake lever free play:

1. Measure the distance the brake lever (Fig. 4-17) moves before the brakes start to take hold. Free play, measured at the tip of the front brake lever (1) should be:
3/8 – 13/16 in (10 – 20 mm)

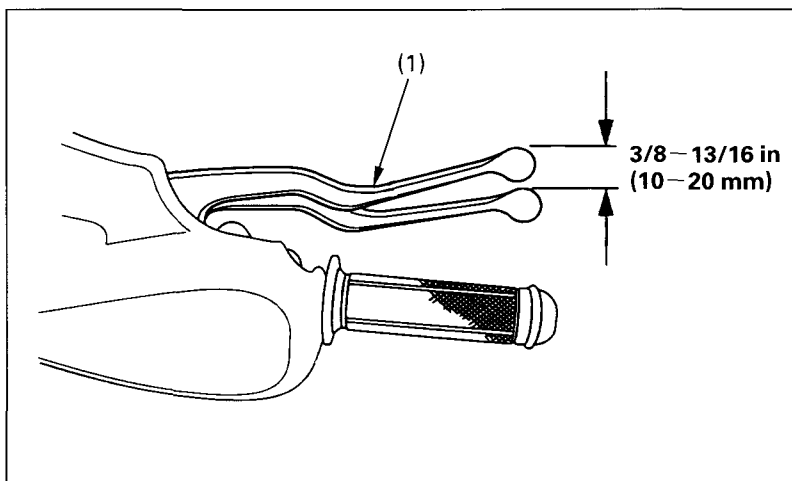


Fig. 4-17

(1) Front brake lever