


Starting Procedure

To restart a warm engine, follow the procedure for “High Air Temperature.”

Normal Air Temperature

10°–35°C (50°–95°F)

1. Pull the choke lever (1) down all the way to Fully ON (A), if the engine is cold.
2. Start the engine, leaving the throttle closed.

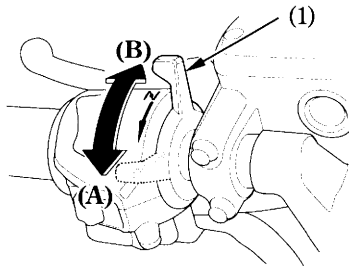

(1) Choke lever

(A) Fully ON

(B) Fully OFF

3. Immediately after the engine starts, operate the choke lever (1) to keep fast idle at:

2,000–3,000 min⁻¹ (rpm)

4. About a half minute after the engine starts, push the choke lever (1) up all the way to Fully OFF (B).
5. If idling is unstable, open the throttle slightly.

CAUTION:

*The red low oil pressure indicator should go off a few seconds after the engine starts. If the light stays on, stop the engine immediately and check engine oil level. Operating the engine with insufficient oil pressure can cause serious engine damage.