

Rear Brake

Adjustment:

1. Place the motorcycle on its side stand.
2. Measure the distance the rear brake pedal (1) moves before the brake starts to take hold.


Free play should be 10–15mm (3/8–5/8 in). If adjustment is necessary, turn the rear brake adjusting nut (2).

NOTE:


- * Make sure that the cut-out on the adjusting nut is seated on the brake arm pin after the final adjustment has been made.

Other Checks:

Make sure that the brake cable, brake arm, spring, and fasteners are in good condition.

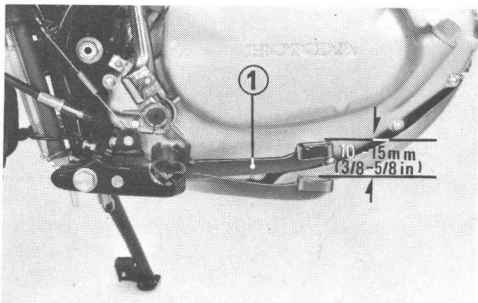

(1) Brake pedal

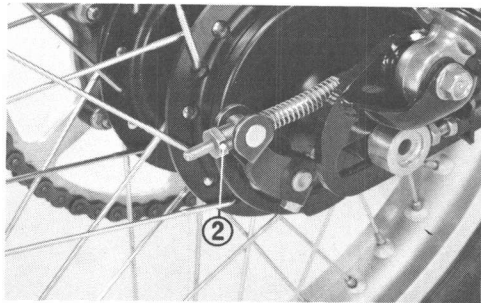

(2) Adjusting nut