

## **HANDLEBAR**

### **REMOVAL**

Remove the headlight (Page 17–2) and disconnect the wires for the ignition and headlight switches.

Remove the wire bands.  
Remove the throttle lever housing.

Remove the front and rear brake lever bracket holders and the brackets.  
Loosen the choke cable nut and remove the choke cable from the handlebar upper holder.


Remove the handlebar upper holder cover cap.  
Remove the screws attaching the upper holder cover and the cover.

Remove the handlebar holder and handlebar.

### **INSTALLATION**

Place the handlebar on the handlebar lower holders.

Align the handlebar punch marks with the top of the handlebar lower holders.

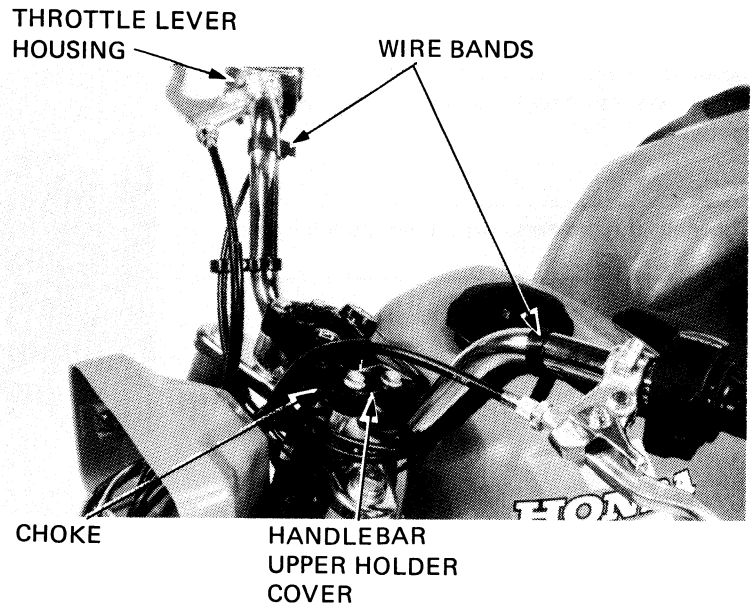

Install the handlebar upper holders on the handlebar.

Tighten the forward bolts first, then tighten the rear bolts.

**TORQUE: 18–30 N·m**  
**(1.8–3.0 kg·m, 13–22 ft·lb)**

Connect the ignition switch and headlight switch wires color-to-color.  
Install the headlight.

Connect the brake cables.  
Install the throttle lever housing (Page 11–5).

Install the choke cable.  
Install the handlebar upper holder cover and cap.

