


BRAKE FLUID


Check the front and rear brake fluid reservoir level. If the level nears the lower level mark, remove the cap and fill the reservoir with DOT-3 or 4 brake fluid to the upper level mark.

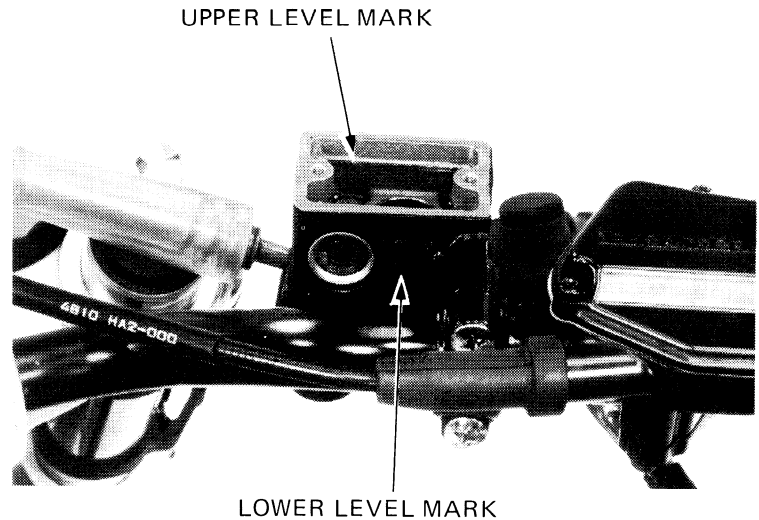

Check the entire system for leaks, if the level is low.

CAUTION

- Do not remove the cover until the handlebar has been turned so that the reservoir is level.
- Do not mix different types of fluid, as they are not compatible with each other.
- Avoid spilling fluid on painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.

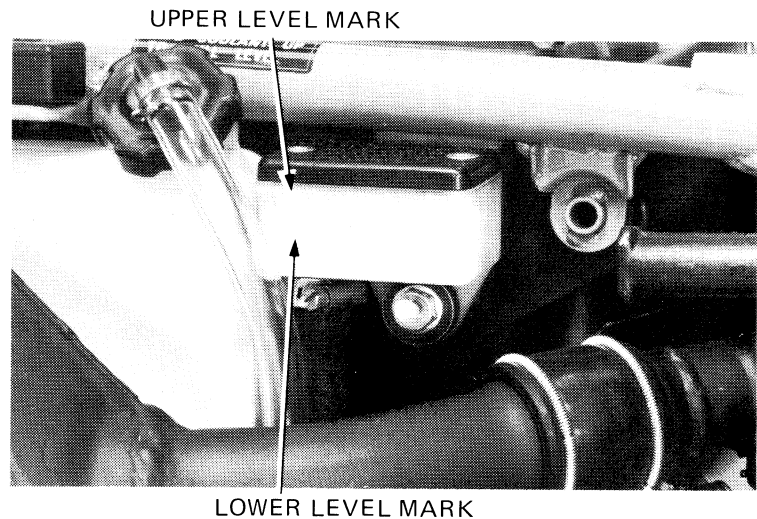

CLUTCH SYSTEM

Measure the clutch lever free play:

FREE PLAY: 10–20 mm (3/8–3/4 in)

