

## CRANKCASE/TRANSMISSION/CRANKSHAFT

Left countershaft bearing:

DRIVER 07749-0010000

ATTACHMENT, 52 x 55 mm 07746-0010400


PILOT, 20 mm 07746-0040500

Gearshift drum bearing:

DRIVER 07749-0010000

ATTACHMENT, 42 x 47 mm 07746-0010300

PILOT, 25 mm 07746-0040600

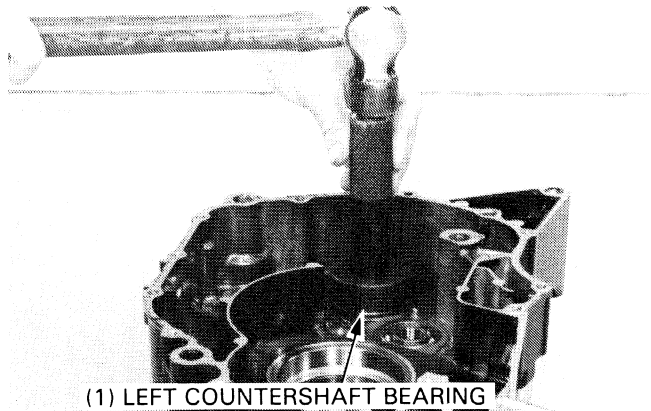


Right mainshaft bearing:

DRIVER 07749-0010000

ATTACHMENT, 52 x 55 mm 07746-0010400

PILOT, 22 mm 07746-0041000

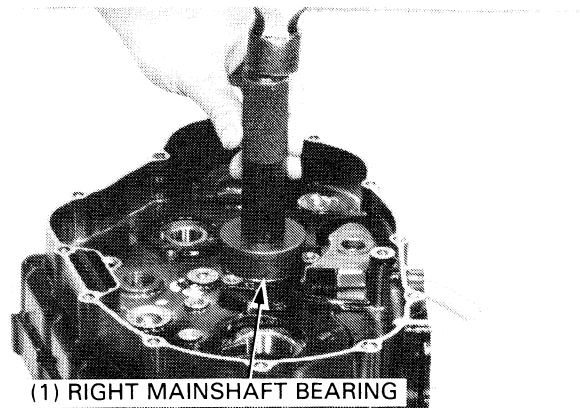


Right countershaft bearing:

DRIVER 07749-0010000

ATTACHMENT, 42 x 47 mm 07746-0010300

PILOT, 20 mm 07746-0040500

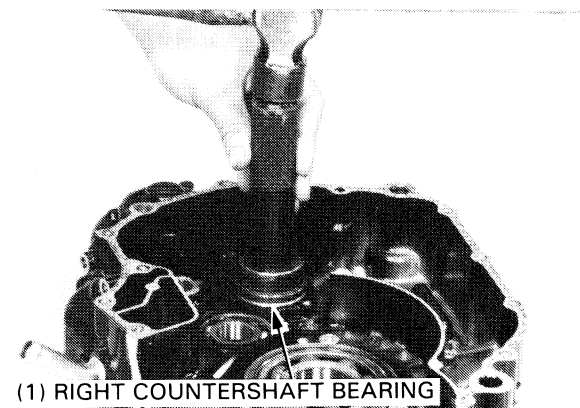

Install a new countershaft oil seal.

