


Drive Chain ► Inspecting the Drive Chain Slack

4. Pull up the drive chain and check the slack between the top of the swingarm and the drive chain by the scale.

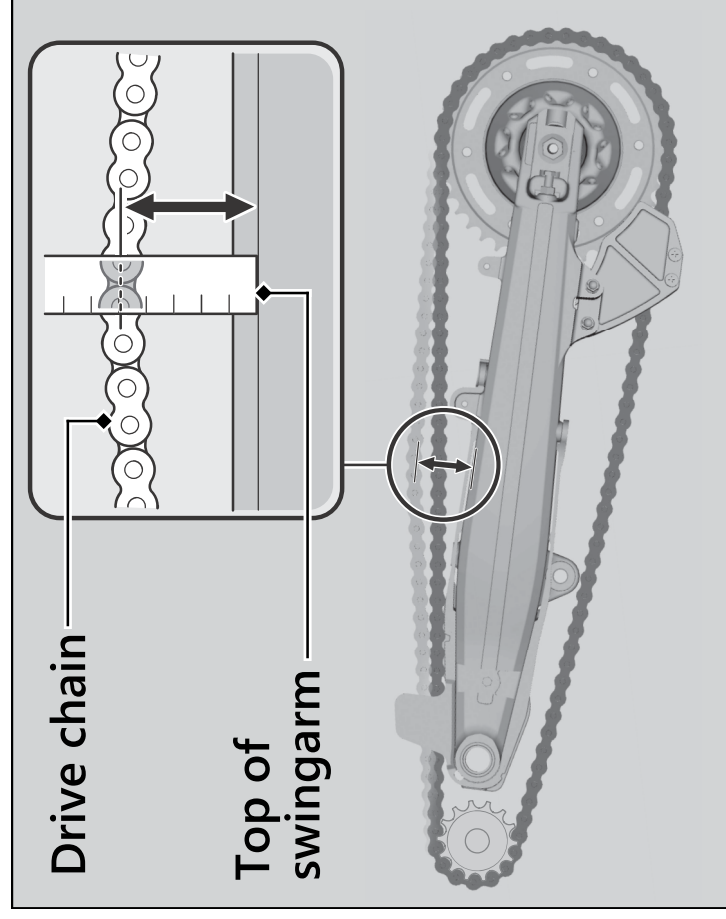

Drive chain slack:

50 - 55 mm (2.0 - 2.2 in)

- Do not ride your vehicle if the slack exceeds 57 mm (2.2 in).

5. Roll the vehicle forward and check that the chain moves smoothly.
6. Inspect the sprockets. ► P. 64
7. Clean and lubricate the drive chain. ► P. 64