


## Adjusting the Front Brake Lever Freeplay

Adjust the freeplay of the brake lever with the front wheel pointed straight ahead.

### Upper Adjustment

Attempt adjustment with upper brake cable adjuster first.


1. Pull back the rubber dust cover.
2. Loosen the upper lock nut.
3. Turn the front brake cable adjuster until the freeplay is 10 to 20 mm (0.4 to 0.8 in).
4. Tighten the upper lock nut and check the freeplay again.
5. Install the rubber dust cover.

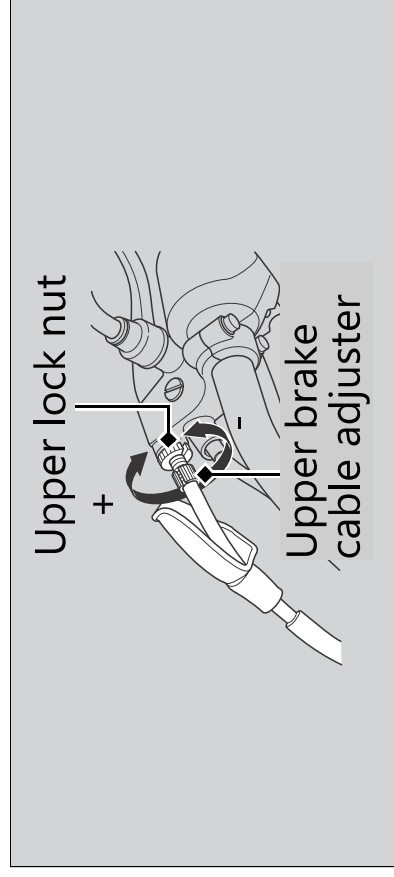

### Lower Adjustment

If the upper brake cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower brake adjuster.

Make sure the cut-out on the adjusting nut is seated on the brake arm pin when adjusting the freeplay.

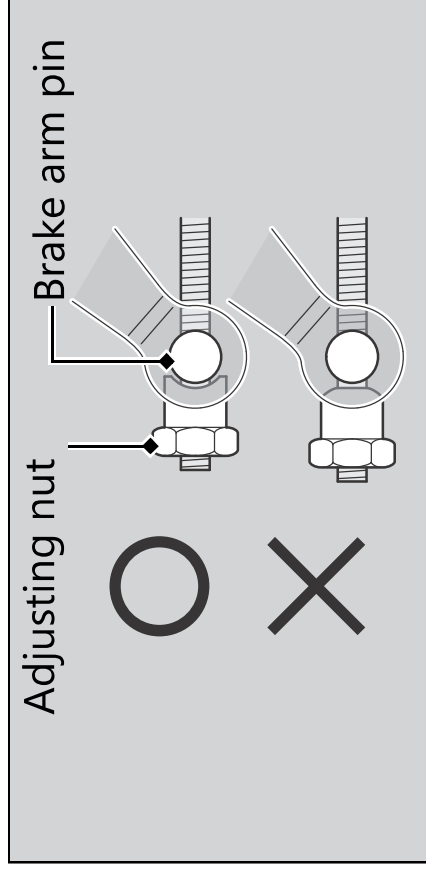

If proper adjustment cannot be obtained by this method, see your dealer.