


Remove the cam chain tensioner stopper tool.

Install the new sealing washer and cam chain tensioner lifter sealing bolt.  
Tighten the bolt securely.

Install the removed parts in the reverse order of removal.

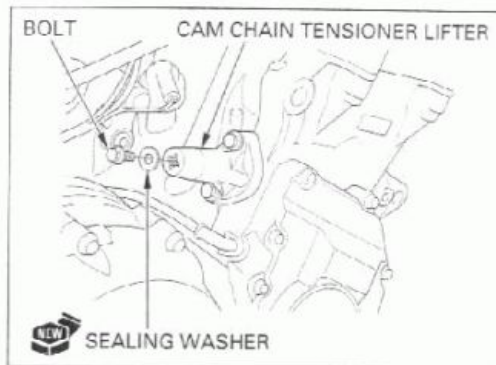

## ENGINE OIL/OIL FILTER

### OIL LEVEL INSPECTION


Start the engine and let it idle for 2–3 minutes.  
Turn off the engine and support the motorcycle in an upright position on level ground.

Remove the oil level dipstick and wipe it clean.  
Reinstall the oil level dipstick, but do not screw it in.



Remove the oil level dipstick and check the oil level.

If the level is below the lower mark on the dipstick, fill the crankcase with the recommended oil.

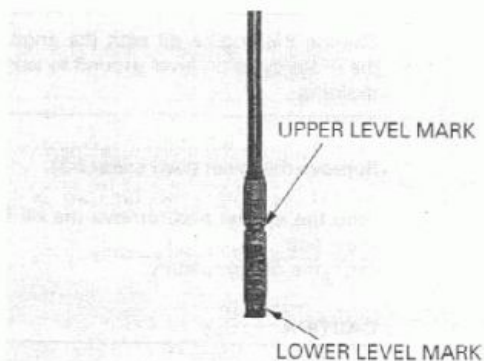

Remove the oil filler cap.

