


## LUBRICATION SYSTEM


### TOOLS

Oil pressure gauge set  
07506-300001

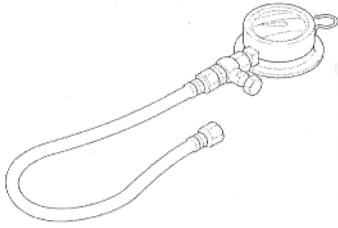

or equivalent commercially available in U.S.A.

Oil pressure gauge attachment  
07406-0030000

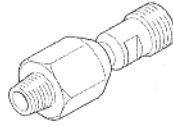

or equivalent commercially available in U.S.A.

## TROUBLE SHOOTING

### Oil level too low

- Oil consumption
- External oil leak
- Worn piston rings
- Improperly installed piston rings
- Worn cylinders
- Worn valve stem seals
- Worn valve guide

### Low oil pressure

- Oil level low
- Clogged oil strainer
- Internal oil leak
- Incorrect oil being used

### No oil pressure

- Oil level too low
- Oil pressure relief valve stuck open
- Broken oil pump drive chain
- Broken oil pump drive or driven sprocket
- Damaged oil pump
- Internal oil leak

### High oil pressure

- Oil pressure relief valve stuck closed
- Clogged oil filter, oil cooler gallery or metering orifice
- Incorrect oil being used

### Oil contamination

- Oil or filter not changed often enough
- Worn piston rings

### Oil emulsification

- Blown cylinder head gasket
- Leaky coolant passage
- Entry of water