


Throttle Operation

1. Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
2. Check the throttle grip play at the grip. Standard play is approx 2–6 mm (0.08–0.24 in.) of the grip rotation.

To adjust the play:

Slide the rubber, loosen the lock nut (1) and turn the adjuster (2).

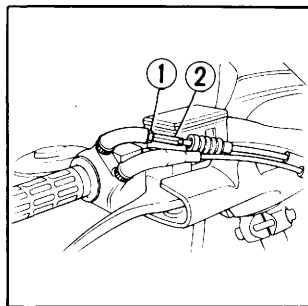

Operación del acelerador

1. Verifique el giro suave del puño del acelerador de la posición completamente abierta a la posición completamente cerrada, en ambas posiciones extremas de la dirección.
2. Revise el juego del puño del acelerador. El juego normal es de 2–6 mm aproximadamente, del giro del puño.

Para ajustar la holgura:

Deslizar el caucho, aflojar la contratuerca (1) y girar ajustador (2).