Drive Chain Rollers


Check the upper drive chain roller (1) and lower drive chain roller (2) for wear or damage. Measure the diameter of the drive chain rollers and replace them if below the service limit.

Service Limit:

Upper roller: 1.2 in (31 mm) Lower roller: 1.2 in (31 mm)

Replace the roller if necessary as follows. Install the upper drive chain roller (Green) with the " \rightarrow " mark (3) facing toward the bracket and lower drive chain roller (Black) with the "→" mark facing toward outside.

Install new a drive chain roller bolt (4) and nut (5).

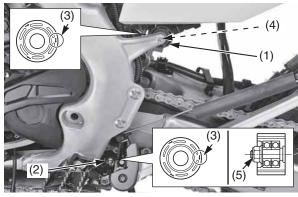

- (1) upper drive chain roller (Green)
- (2) lower drive chain roller (Black)
- (3) "→" mark
- (4) drive chain roller bolt (new)
- (5) drive chain roller nut


Clean the threads of the drive chain roller bolt and apply locking agent to the threads.

Tighten the drive chain roller bolt and nut to the specified torque:

9 lbf·ft (12 N·m, 1.2 kgf·m)

Adjustment

- 1. Loosen the rear axle nut (1).
- 2. Loosen the chain adjuster lock nuts (2) and turn the adjusting bolts (3) counterclockwise to decrease slack or clockwise to increase slack. Align the index marks (4) of the axle plates (5) with the same reference marks (6) on both sides of the swingarm.

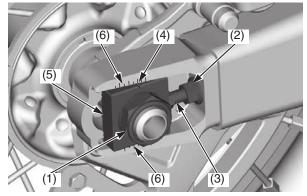

- (1) rear axle nut
- (4) index marks (2) chain adjuster lock nuts (5) axle plates
- (3) adjusting bolts
- (6) reference marks
- 3. Tighten the rear axle nut to the specified
 - 94 lbf-ft (128 N·m, 13.1 kgf·m)
- 4. Recheck chain slack and adjust as necessary.
- Turn the adjusting bolt counterclockwise until it touches the axle plates lightly. Then tighten the chain adjuster lock nuts to the specified torque while holding the adjusting bolts with a wrench:

20 lbf·ft (27 N·m, 2.8 kgf·m)

Lubrication

Lubricate the drive chain with Pro Honda HP Chain Lube or an equivalent chain lubricant or drive chain lubricant designed specifically for use with O-ring chains. Wipe off the excess chain lubricant.

Commercial chain lubricants not designed for motorcycle drive chains may contain solvents which could damage the O-rings.

