


3. Remove the right front cowl (page 59 ).
4. Loosen the lock nut (5) at the lower end of the cable. Turn the adjusting nut (4) to obtain the specified free play. Tighten the lock nut and check the adjustment.
5. Install the right front cowl.
6. Start the engine, pull in the clutch lever and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. The motorcycle should begin to move smoothly and accelerate gradually.

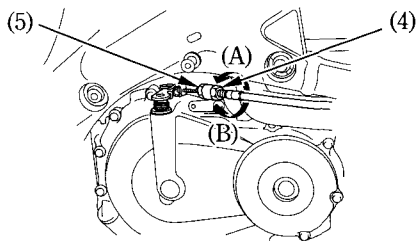

- |                   |                        |
|-------------------|------------------------|
| (4) Adjusting nut | (A) Increase free play |
| (5) Lock nut      | (B) Decrease free play |

If proper adjustment cannot be obtained or the clutch does not work correctly, see your Honda dealer.

#### Other Checks:

Check the clutch cable for kinks or signs of wear that could cause sticking or failure. Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.