


marks on the side of the battery. If the electrolyte level is found to be low, remove the battery filler caps ⑥ and carefully add distilled water until the electrolyte level in each cell is between the upper and lower level marks. Use a small syringe or plastic funnel to add water. Use distilled water to avoid contaminating the electrolyte.

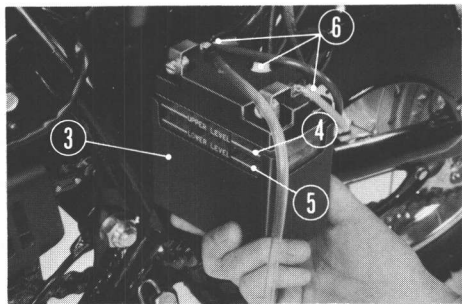

- ③ Battery ④ Upper level mark
⑤ Lower level mark ⑥ Filler caps

Battery Removal and Installation :

The battery should be removed for prolonged storage or for recharging if electrolyte specific gravity falls below 1.200. Refer to page 58 for this procedure.

CAUTION :

When installing the battery, be careful not to bend or twist the vent tube.

