


BATTERY

REMOVAL

- Remove the seat.
- Remove the battery holder bolt.
- Disconnect the negative cable, and then positive cable.
- Remove the battery.

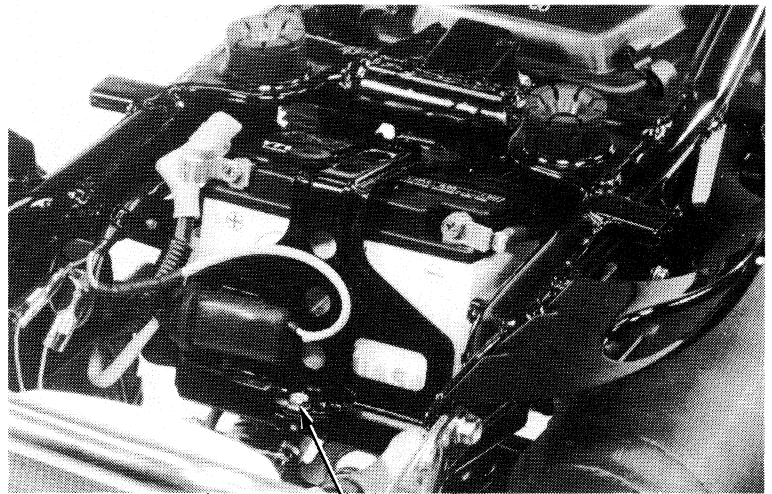

BATTERY HOLDER BOLT

Measure the battery voltage using a digital voltmeter (07411-0020000 or KS-AHM-32-003: U.S.A. only).


VOLTAGE: Fully charged: 13.1V
Under charged: Blow 12.8V

CHARGING

Connect the charger positive (+) cable to the battery positive (+) terminal.

Connect the charger negative (-) cable to the battery negative (-) terminal.

	Standard	Maximum
Charging current	1.0A	5.0A
Charging time	5 hours	1 hour

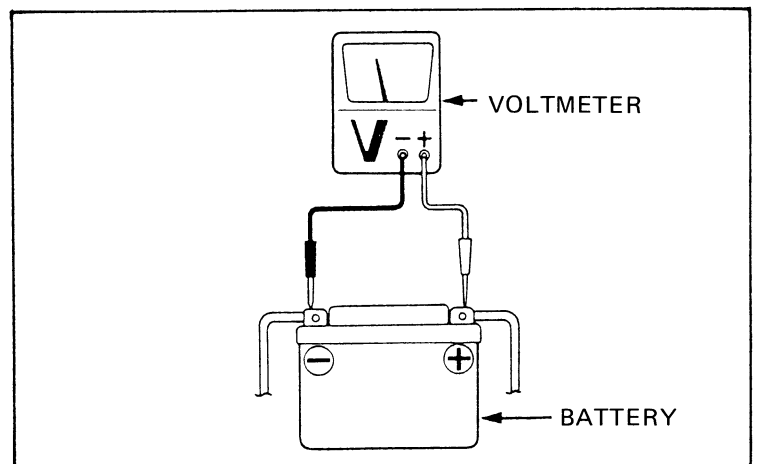

WARNING

- *Keep flames and sparks away from a charging battery.*
- *Turn power ON/OFF at the charger, not at the battery terminals.*

CAUTION

- *Quick-charging should only be done in an emergency; slow-charging is preferred.*
- *For battery charging, do not exceed the charging current and time specified on the battery cover. Using excessive current or extending the charging time may damage the battery.*

After installing the battery, coat the terminals with clean grease.

