


- (1) FORK SPRING
- (2) SPRING SEAT
- (3) DISTANCE COLLAR
- (4) O-RING (NEW)
- (5) FORK BOLT
- (6) TAPERED BUSHING
- (7) FORK TUBE

Install the fork spring, spring seat, distance collar and the tapered bushing.

Apply recommended fork fluid to the new O-ring, then screw the fork bolt into the fork tube.

**Torque: 13 N·m (1.3 kgf·m, 9.3 lbf·ft)**

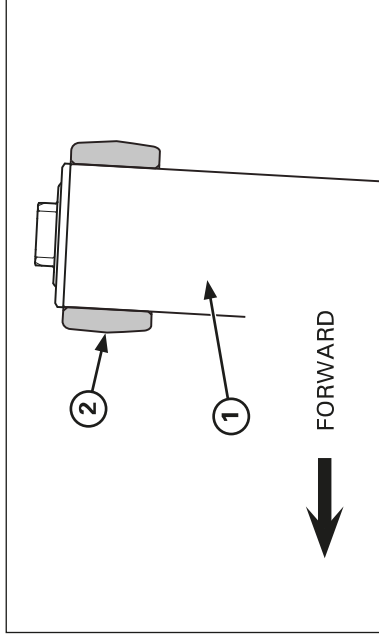


- (1) FORK TUBE
- (2) TOP BRIDGE

**Installation**

Install the fork tube.

Raise the fork through the bottom bridge and top bridge.

Place the fork tubes in the top clamp level as shown in the picture.

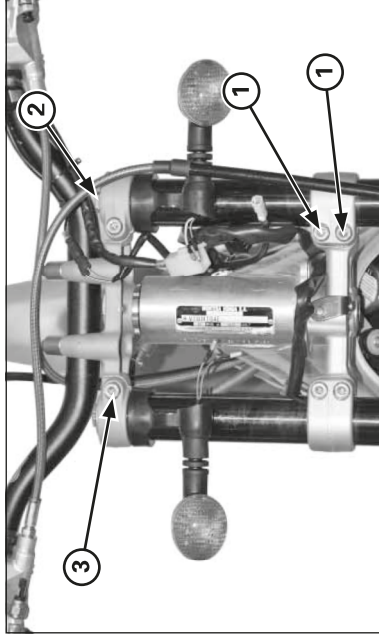

- (1) BOTTOM BRIDGE PINCH BOLTS
- (2) FORK BOLT
- (3) TOP BRIDGE PINCH BOLTS

Tighten the bottom bridge pinch bolts to the specified torque.

**Torque: 21 N·m (2.1 kgf·m, 14 lbf·ft)**

Overtightening the pinch bolts can deform the outer tube. Deformed outer tube must be replaced.

Tighten the fork bolt.

Tighten the top bridge pinch bolt to the specified torque.

**Torque: 21 N·m (2.1 kgf·m, 14 lbf·ft)**

Return spring pre-load and rebound adjuster to their original positions as noted during removal.

Install the following:

- Front fender
- Front wheel (page 5-2)