




Suspension

Rear Suspension Spring Pre-load

Refer to *Safety Precautions* on page 62 .

RIGHT SIDE

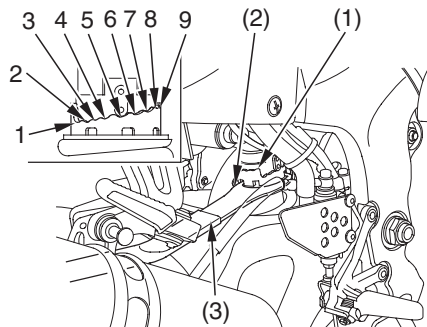

- (1) spring pre-load adjuster
- (2) pin spanner
- (3) extension bar

The spring pre-load adjuster (1) has 9 positions for different load or riding conditions.

Adjust the spring pre-load by turning the spring pre-load adjuster with a pin spanner (2) and extension bar (3).

Positions 1 to 4: for a light load and smooth road conditions.

Position 5: standard position.

Positions 6 to 9: for when the motorcycle is more heavily loaded. (Also increase spring pre-load for stiffer rear suspension.)

Always adjust the shock absorber position in sequence (1-2-3-4-5-6-7-8-9 or 9-8-7-6-5-4-3-2-1). Attempting to adjust directly from 1 to 9 or 9 to 1 may damage the shock absorber.

