

MAINTENANCE


Raise the front of the vehicle so that there is no weight on the front wheel.

Check air pressure in each fork tube.

STANDARD AIR PRESSURE: 0 kPa (0 kg/cm², 0 psi)

NOTE

- Use of more than 70 kPa (0.7 kg/cm², 10 psi) is not recommended because fork action becomes stiff.

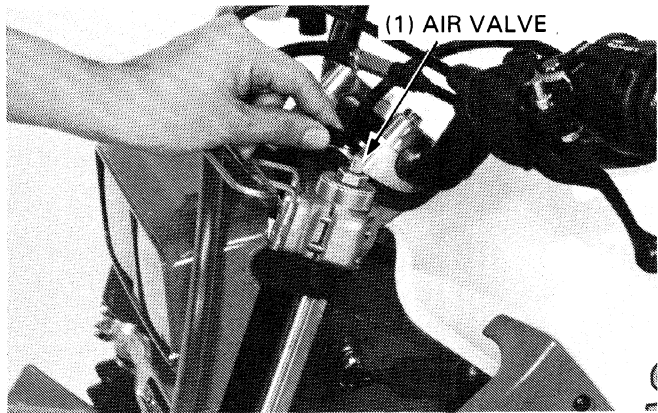


REAR SUSPENSION

Check the shock absorber for a leak or damage.

Check the suspension operation.


Adjust the spring preload if necessary (page 13-8).

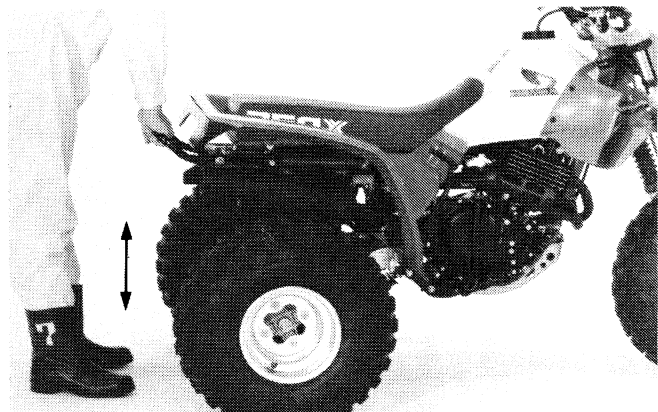

Raise the rear wheels off the ground with a jack or block under the engine.

Move the rear axle side ways with force to see if the wheel and swing arm bearings are worn.

Replace the bearings if there is any play (Section 13).

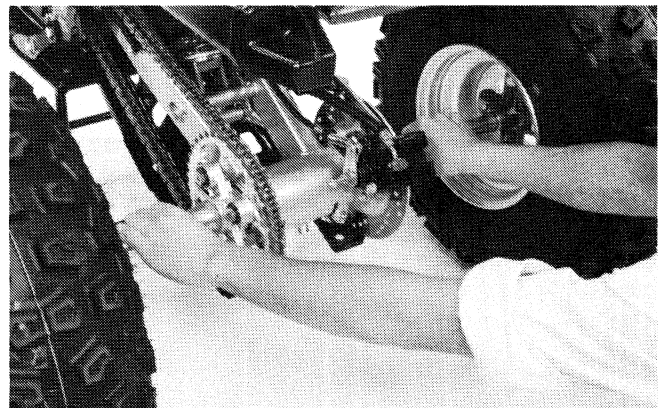

BRAKE PADS

Visually inspect the front brake pad for wear from the bottom of the caliper.

Visually inspect the rear brake pad for wear from the rear of the caliper.

