


## Installation

1. Attach the side collars to the wheel.
2. On the left side, place the wheel between the fork legs and insert the front axle shaft, through the left fork leg and wheel hub.

### NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

3. Align the end of the front axle shaft with the surface of the fork leg.

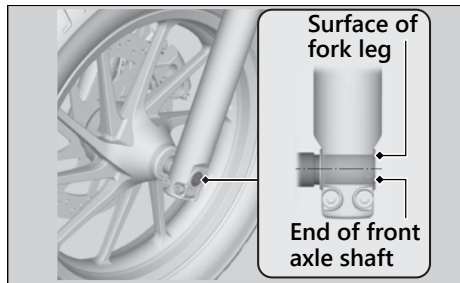

4. Tighten the left axle pinch bolts to hold the front axle shaft.
5. Install and tighten the front axle bolt.

**Torque:** 38 lbf·ft (51 N·m, 5.2 kgf·m)

6. Loosen the left axle pinch bolts.
7. Tighten the right axle pinch bolts.

**Torque:** 16 lbf·ft (22 N·m, 2.2 kgf·m)